

# Contents

## Introductory pages

About this manual	0-5
Introduction to the Taurus/Sable	0-5
Vehicle identification numbers	0-6
Buying parts	0-7
Maintenance techniques, tools and working facilities	0-7
Booster battery (jump) starting	0-15
Jacking and towing	0-16
Automotive chemicals and lubricants	0-17
Conversion factors	0-18
Safety first!	0-19
Troubleshooting	0-20

## Chapter 1

Tune-up and routine maintenance	1-1
---------------------------------	-----

## Chapter 2 Part A

Overhead valve (OHV) engine	2A-1
-----------------------------	------

## Chapter 2 Part B

Overhead camshaft (OHC) engine	2B-1
--------------------------------	------

## Chapter 2 Part C

General engine overhaul procedures	2C-1
------------------------------------	------

## Chapter 3

Cooling, heating and air conditioning systems	3-1
---	-----

## Chapter 4

Fuel and exhaust systems	4-1
--------------------------	-----

## Chapter 5

Engine electrical systems	5-1
---------------------------	-----

## Chapter 6

Emissions and engine control systems	6-1
--------------------------------------	-----

## Chapter 7

Automatic transaxle	7-1
---------------------	-----

## Chapter 8

Driveaxles	8-1
------------	-----

## Chapter 9

Brakes	9-1
--------	-----

## Chapter 10

Suspension and steering systems	10-1
---------------------------------	------

## Chapter 11

Body	11-1
------	------

## Chapter 12

Chassis electrical system	12-1
---------------------------	------

## Wiring diagrams

12-22

## Index

IND-1