

FUEL FILTER REPLACEMENT

⚠ WARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Keep heat, sparks, and flame away.
- Wipe up spills immediately.
- Handle fuel only outdoors.

Engine Serial Numbers 1700001 ~ subsequent:

Disconnect the fuel tank line from the motor.

Remove the engine cover and remove the fuel filter.

NOTE:

Before removing the filter, place clamps on the fuel tubes on each side of the strainer to prevent fuel leakage.

Install the new fuel filter with the arrow mark pointing toward the carburetor.

NOTE:

Fuel flow will be impeded if the filter is installed backwards.

Remove the clamps used to close the fuel tubes. Connect the fuel tank line to the motor.

Turn the fuel tank vent knob to the ON position, pump the primer bulb, and check for leaks.

