



1. *Steering stem*
2. *Steering stem arm*
3. *Support*
4. *Torque to 6bN•m (53blbf•in)*
5. *Integrated flat key must be seated in keyway and steering stem arm locked in place*

○ NOTE : Once steering stem arm is properly tightened, look between body and front support to make sure there is no gap between steering stem arm and its support. If there is a gap, components are not properly installed.

Connect wiring harnesses.

Route throttle cable alongside bilge. Insert cable barrel into carburetor throttle lever.

Insert throttle cable alongside choke cable in tie-blocks.

For throttle cable adjustment, refer to FUEL SYSTEM 05-03.

For steering alignment, refer to ALIGNMENT 10-04.