

REMOVING THE OVEN LIGHT SWITCH

WARNING

Electrical Shock Hazard

Disconnect from electrical and gas supplies before servicing unit.

Failure to do so could result in death, electrical shock, or explosion.

CAUTION: When you work on the range, be careful when handling the sheet metal parts. Sharp edges may be present, and you can cut yourself if you are not careful.

1. Turn off the gas supply and electrical power to the range.
 2. Pull the range out from the cabinet far enough to access the back panel.
- Refer to Figure 4-11 for the following steps.
3. Remove the right side panel as follows (see inset #1). NOTE: The inset shows installation of the left side panel, however, the right side panel mounts to the range in the same manner:
 - a) Remove the two screws from the rear panel mounting tabs for the right side panel.
 - b) From the back, push the side panel forward as far as it will go and unhook it from the screw at the top front corner.
 - c) Pull the top away from the range several inches, then lift the panel free of the retaining clips at the bottom.
 4. Press in on the locking arms while you push out on the body of the oven light switch, and remove the switch (see inset #2).
 5. Unplug the three wires from the terminals of the oven light switch.