



UNIVERSAL JOINT DISASSEMBLY

1.Remove:

- Universal joint

Universal joint removal steps:

- Remove the circlips ①.
- Place the U-joint in a press.
- With a suitable diameter pipe ② beneath the yoke ③, press the bearing ④ into the pipe as shown.

NOTE:

It may be necessary to lightly tap the yoke with a punch.

- Repeat the steps for the opposite bearing.
- Remove the yoke.

NOTE:

It may be necessary to lightly tap the yoke with a punch.

2.Remove:

- Universal joint yoke
Use a universal joint holder ①.

	<p>Universal joint holder: P/N. YM-04062, 90890-04062</p>
--	--

DIFFERENTIAL GEAR DISASSEMBLY

1.Remove:

- Ring gear ①

NOTE:

The ring gear and the differential gear cover should be fastened together. Do not disassemble the differential gear.

CAUTION:

The differential gears are assembled into a proper unit at the factory by means of specialized equipment. Do not attempt to disassemble this unit. Disassembly will result in the malfunction of the unit.